

POOL FINDER PLUS

LONG RANGE WATER DETECTOR



USER MANUAL

DEVICE AND IT'S COMPONENTS

1) The Long Range System :



2) Handle



3) Receiving Antenna



4) Transmitting Antenna



WORKING PROCEDURE

1) Connect Handle to Device :

 


2) Connect Receiving & Transmitting Antennas




DEVICE OPERATING STEPS

- 1) On the Device By ON- OFF Switch
- 2) Start the Device by pressing the start button on the keypad
- 3) The Device Works on 3 Languages (German, English, French) Select your option by OK Button on the keypad.
- 4) After Selecting the language water type will appear on display, you can select Natural (or) Salt water by pressing up (or) down button on the keypad.
- 5)After Selecting water type, The range will appear on display you can select between (500M / 1000M / 1500M / 2000M) For Example (Choose 1000M by pressing UP (or) DOWN buttons on the keypad.
- 6) Increase the receiving antenna length to get more signal strength
- 7) After Selecting the range, the search screen will appear Which will start the device will give beep sound
- 8)The user should position towards north while starting

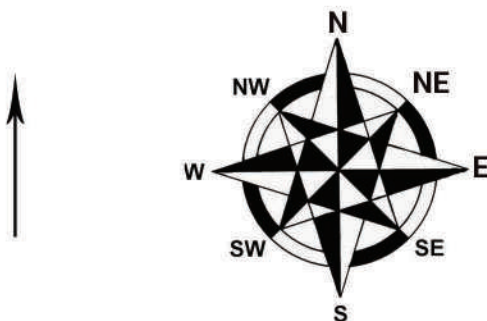

 - 9) Start the searching by holding the device
 - a) If the target is on the right side means the device will turn right side
 - b) If the target is on the left side means the device will turn left side
 - c) When you pass the target the device will turn to the back
 - d) Then you can stop & point the target 1M square
 - e) After Detecting the target confirm the target from each direction

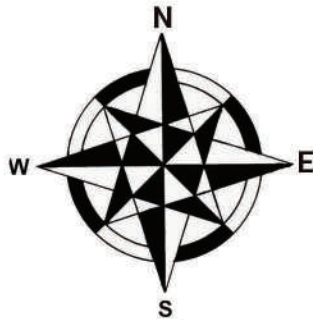


N → S

S → N

E → W

W → E

 f) To determine the depth of the target stand above the target and turn 45 degrees and walk straight a head until the device reverse to back

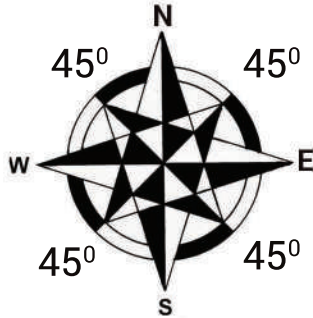

g) Measure the distance between the device turning back point to the starting point

h) Multiply the measuring distance into 10

For Example: The Distance between center point and the device turning point is 20feet than the depth will be
 $20 \text{ feet} \times 10 = 200\text{feet}$ is the depth.

When you move on to the center point by closing the receiving antenna the device will rotate in the circular motion.

Precautions

- ✓ Please be sure that all precautions taken against risks.
- ✓ Do not use your device while it is raining or on extremely wet floor.
- ✓ Turn on your device after you make sure that all parts are in place.
- ✓ Make sure that battery of your device is fully charged before scanning.
- ✓ If the device starts to give a beep sound, close the device and recharge the battery.
- ✓ We recommend reading the user manual before starting work on the device to understand everything and to avoid mistakes during the search.
- ✓ After the device starts making sound and turns off automatically, put the battery on charge and do not try to start the device without charging the battery.
- ✓ Main unit of the device is under warranty against all electronic breakdowns for two (2) years.
- ✓ Damages caused by user errors (laying open the main unit, hits, harms etc.) are not within this warranty.
- ✓ Battery and antenna are also not within this warranty.
- ✓ You should follow the instructions in this user manual strictly to minimize the possible faults and to use your device correctly.

Zeo Detect

World's Best Detectors



Zeo Detect Company

Address: Dernburgstr.33

14057 Berlin, Germany

Phone No: +4933839066343

Email: info@zeodetect.de

Website: www.zeodetect.de

World wide Marketing by
Zeo World Group

Address: 2020 Pennsylvania Ave,
NW Suite 320, Washington, DC 20006

Phone No: +1 9142305090

Watsapp No: +1 9142305090

Email: info@zeodetect.de

Website: www.zeodetect.de