

ZEO-DUAL

LONG RANGE WATER & GOLD DETECTOR



USER MANUAL

DEVICE AND IT'S COMPONENTS

1) The Long Range System :



2) Handle



3) Receiving Antenna



4) Transmitting Antenna



WORKING PROCEDURE

1) Connect Handle to Device :

 


2) Connect Receiving & Transmitting Antennas





DEVICE OPERATING STEPS FOR WATER DETECTOR


- 1) On the Device By ON- OFF Switch
- 2) Start the Device by pressing the start button on the keypad
- 3) The Device Works on 3 Languages (German, English, French) Select your option by OK Button on the keypad.
- 4) After Selecting the language water type will appear on display, you can select Natural (or) Salt water by pressing up (or) down button on the keypad.
- 5)After Selecting water type, The range will appear on display you can select between (500M / 1000M / 1500M / 2000M) For Example (Choose 1000M by pressing UP (or) DOWN buttons on the keypad.
- 6) Increase the receiving antenna length to get more signal strength
- 7) After Selecting the range, the search screen will appear Which will start the device will give beep sound
- 8)The user should position towards north while starting

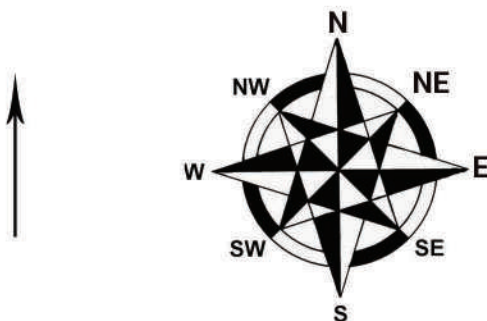

  - 8) Start the searching by holding the device
 - a) If the target is on the right side means the device will turn right side
 - b) If the target is on the left side means the device will turn left side
 - c) When you pass the target the device will turn to the back
 - d) Then you can stop & point the target 1M square
 - e) After Detecting the target confirm the target from each direction

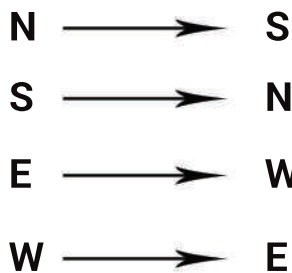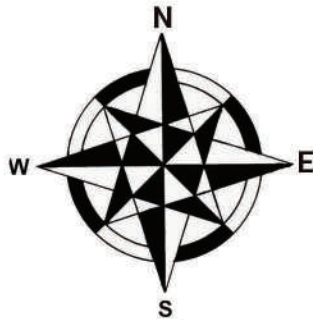

 f) To determine the depth of the target stand above the target and turn 45 degrees and walk straight a head until the device reverse to back

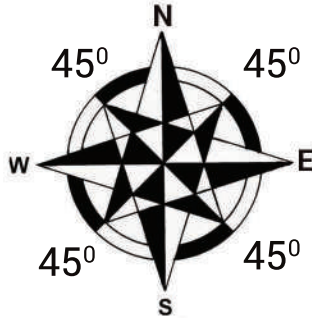

g) Measure the distance between the device turning back point to the starting point

 
h) Multiply the measuring distance into 10

For Example: The Distance between center point and the device turning point is 20feet than the depth will be $20 \text{ feet} \times 10 = 200\text{feet}$ is the depth.

When you move on to the center point by closing the receiving antenna the device will rotate in the circular motion.

DEVICE OPERATING STEPS FOR GOLD DETECTOR

- 1) On the Device By ON- OFF Switch
- 2) Start the Device by pressing the start button on the keypad
- 3) The Device Works on 3 Languages (German, English, French) Select your option by OK Button on the keypad.
- 4) After Selecting the language type will appear on display, you can select Gold, Silver, Diamond and Gemstones by pressing up (or) down button on the keypad.
- 5) After Selecting the type, The range will appear on display you can select between (500M / 1000M / 1500M / 2000M) For Example (Choose 1000M by pressing UP (or) DOWN buttons on the keypad.
- 6) Increase the receiving antenna length to get more signal strength
- 7) After Selecting the range, the search screen will appear Which will start the device will give beep sound
- 8)The user should position towards north while starting

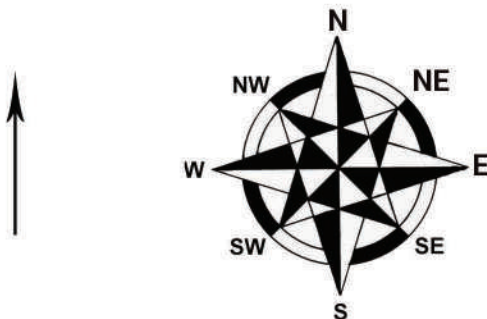

8) Start the searching by holding the device

 
a) If the target is on the right side means the device will turn right side

b) If the target is on the left side means the device will turn left side

c) When you pass the target the device will turn to the back

d) Then you can stop & point the target 1M square

e) After Detecting the target confirm the target from each direction

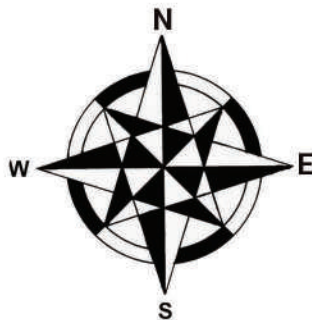


N → S

S → N

E → W

W → E

 f) To determine the depth of the target stand above the target and turn 45 degrees and walk straight a head until the device reverse to back

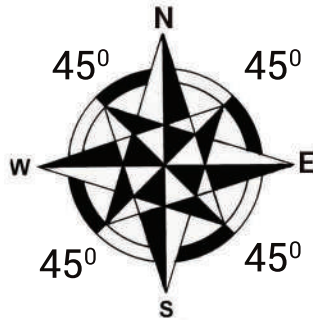

g) Measure the distance between the device turning back point to the starting point.

When you move on to the center point by closing the receiving antenna the device will rotate in the circular motion.

Precautions

- ✓ Please be sure that all precautions taken against risks.
- ✓ Do not use your device while it is raining or on extremely wet floor.
- ✓ Turn on your device after you make sure that all parts are in place.
- ✓ Make sure that battery of your device is fully charged before scanning.
- ✓ If the device starts to give a beep sound, close the device and recharge the battery.
- ✓ We recommend reading the user manual before starting work on the device to understand everything and to avoid mistakes during the search.
- ✓ After the device starts making sound and turns off automatically, put the battery on charge and do not try to start the device without charging the battery.
- ✓ Main unit of the device is under warranty against all electronic breakdowns for two (2) years.
- ✓ Damages caused by user errors (laying open the main unit, hits, harms etc.) are not within this warranty.
- ✓ Battery and antenna are also not within this warranty.
- ✓ You should follow the instructions in this user manual strictly to minimize the possible faults and to use your device correctly.

Zeo Detect

World's Best Detectors



Zeo Detect Company

Address: Dernburgstr.33

14057 Berlin, Germany

Phone No: +4933839066343

Email: info@zeodetect.de

Website: www.zeodetect.de

World wide Marketing by
Zeo World Group

Address: 2020 Pennsylvania Ave,

NW Suite 320, Washington, DC 20006

Phone No: +1 9142305090

Watsapp No: +1 9142305090

Email: info@zeodetect.de

Website: www.zeodetect.de